

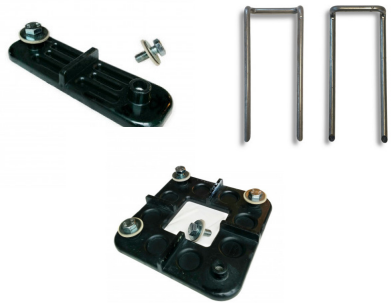


PROGUARD PREMIUM GROUND PROTECTION MAT APPLICATION

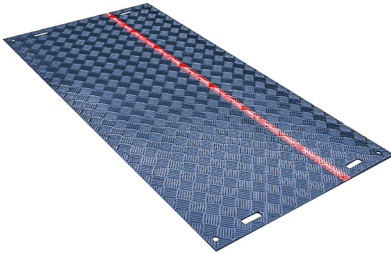


1. CHECK THE AREA THAT THE MATS ARE TO BE LAID ON AND REMOVE ANY LARGE PROTRUSIONS, RUBBLE ETC.

2. CHOOSE THE MOST SUITABLE CONNECTOR FOR YOUR APPLICATION

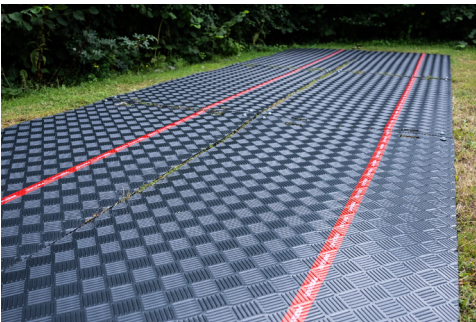

3. LAY THE MATS OUT OVER THE AREA, LINING THE CORNER HOLES UP AS YOU GO.

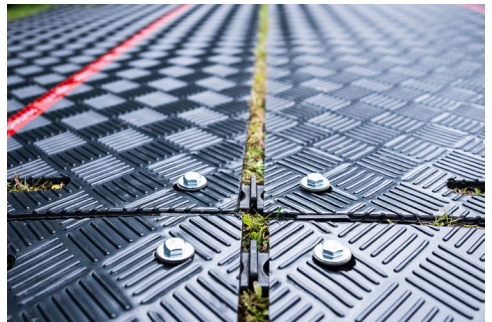

4. JOIN THE MATS TOGETHER USING YOUR CHOSEN CONNECTORS THROUGH THE CORNER HOLES.